

Triple Flexi-Skeiner Assembly Instructions for existing swift users

You need a 7/16" wrench, nut driver, or socket wrench to tighten the hex nut

Remove plastic from both sides of each Disc

Disassemble Existing guides. You will use the following parts from your existing yarn guide:

- Aluminum sled
- Knob
- Brake
- Plastic Plate with marker

Sequence of assembly for Triple Flexi-Skeiner

1. 8" Long Hex Bolt gets inserted thru
2. Existing Aluminum Sled
3. Insert 1 Plastic Washer
4. Insert Existing Plastic Plate
5. Insert 1 Plastic washer (only on older systems which have a depression in the plate)
6. Insert 1 Stainless Steel Sleeve
7. Insert Plastic Disc
8. Insert 1 Stainless Steel Sleeve
9. Insert Plastic Disc
10. Insert 1 Stainless Steel Sleeve
11. Insert 1 Plastic Disc
12. Insert 1 Plastic Washer
13. Insert 2 Steel Washers
14. Install Hex Nut
15. Install Black Cap
16. Install Existing Brake
17. Install Existing Knob

On older systems - The yardage decal will now be off by ¼" Simply mark you decal ¼" past the marks for the new yardage marker. This is because the diameter of the new guides is smaller than the old guide.

Yellow highlighted parts are the parts that you will use from your existing guides

Note if you are converting from a Single set of guides, you must use the Separator disks you got on your single guides.